
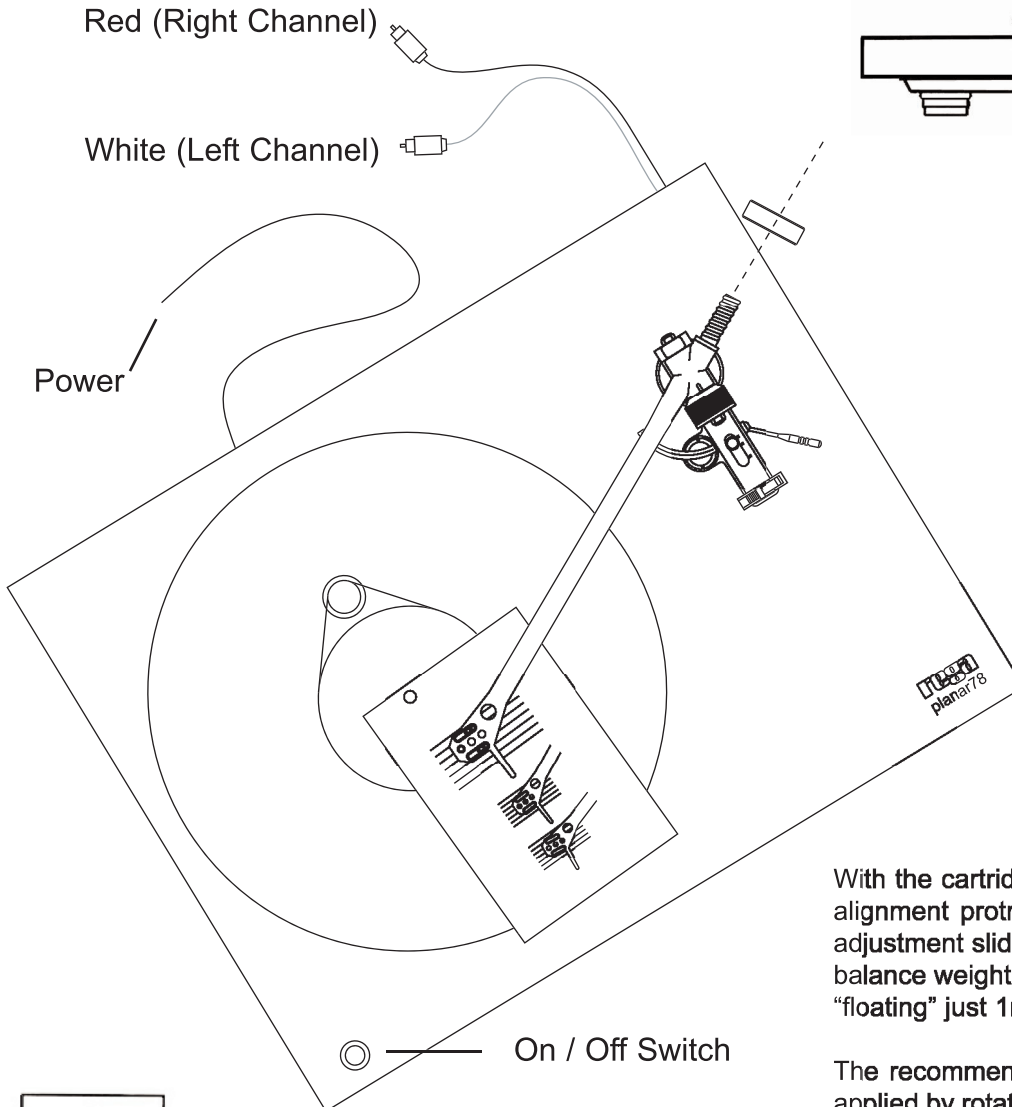


INSTRUCTIONS

P l a n a r 7 8

Mat _____

Platter _____

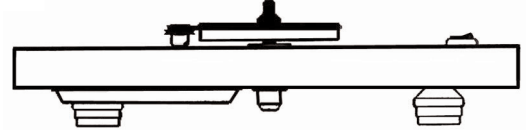


Red (Right Channel)

White (Left Channel)

Power

○ — On / Off Switch

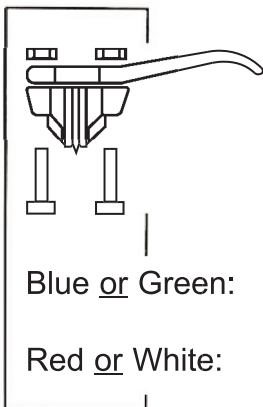

Blue or Green: Right Channel

Red or White: Left Channel

With the cartridge fitted and aligned, using the alignment protractor supplied ensure the bias adjustment slider is set to zero. Screw the balance weight along its shaft until the stylus is "floating" just 1mm clear of the record.

The recommended tracking force can now be applied by rotating the balance weight so that it moves towards the front of the arm. A half turn gives 1g tracking force. Always use a force which corresponds to the upper limit of the cartridge makers recommended range.

Manually rotating the platter before switching the deck on will assist in reducing motor wear and will achieve the correct RPM.

There is no requirement for the application of a bias force when playing 78 discs.

PRECISION ENGINEERED IN ENGLAND BY REGA RESEARCH LTD.

WWW.REGA.CO.UK

WARNING: ANY ATTEMPT TO ADJUST OR REPAIR THIS PRODUCT BY PERSONS OTHER THAN REGA PERSONNEL MAY INVALIDATE THE GUARANTEE.